
Installation Instructions

We recommend you bench test each camera unit before installing on the pole

- Open case
- Turn on switch on unit to RUN
- · Make sure camera switch in set to on
- Ensure rotary dial is set to AV

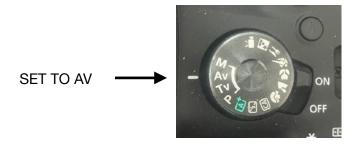

- Set aperture to f14 (This has been preset)
- Wait for green light on unit



- Press red test button
- The camera status light will flash and camera will take photo If the camera does not take a photo check camera lead connection at camera and at unit as this may have be dislodged during sim card inserting


Move slider switch on lens from MF to AF



- Press RED test button again this will now focus the camera and take a new photo
- The camera will beep if the camera in in focus, if no beep then the camera has not locked on to a focus area
- REMEMBER TO CHANGE SLIDER BACK TO MF



Make sure the switch is in RUN mode for normal operation

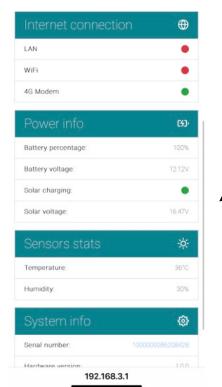

Check solar panel is connected (Log into the system via wifi on your phone and check solar power is working



Other links to help setup your system

Download user manual

Motion Lapse user manual v1.3

How to set up your Motion Lapse System:

https://motionlapse.com.au/how-to-operate-your-new-camera-system/

How to connect camera to Dropbox:

https://motionlapse.com.au/how-to-set-up-drop-box-on-your-camera-system/

How to connect camera to portal

How to add your camera to the portal

How to connect camera to Google Drive

https://motionlapse.com.au/how-to-set-up-your-google-drive/

Installation on to pole camera setup and testing

 $\underline{https://motionlapse.com.au/wp-content/uploads/2023/10/Instalation-Instructions-for-motion-lapse-unit-on-to-pole-.pdf}$

How to connect camera to AWS S3 Bucket

https://youtu.be/EZAfAAj-LYo